

Инструкция

Тренажер Грудной жим сидя Impulse IF8101-250

Полезные ссылки:


[Тренажер Грудной жим сидя Impulse IF8101-250 - смотреть на сайте](#)

[Тренажер Грудной жим сидя Impulse IF8101-250 - читать отзывы](#)

IF8101

CHEST PRESS

OWNER'S MANUAL

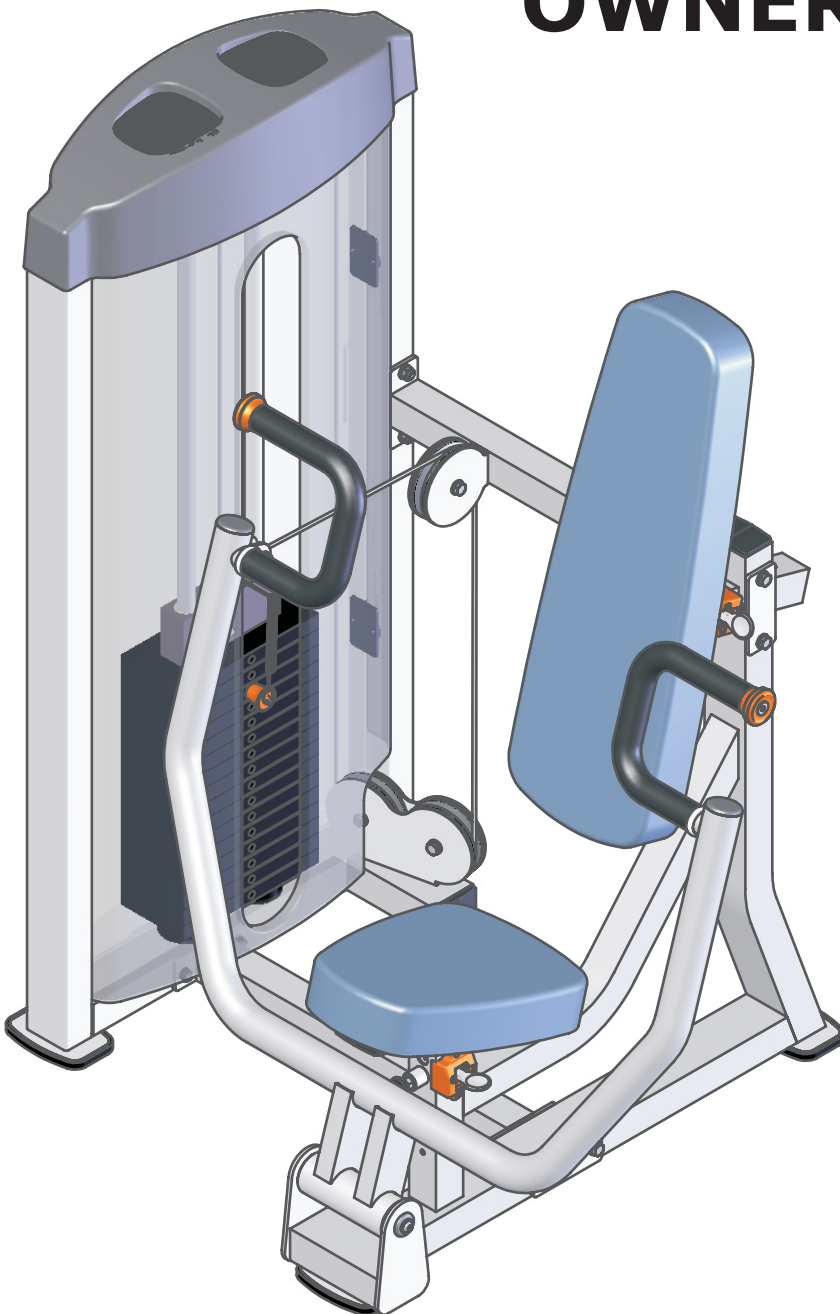

! CAUTION

Read all precautions
and instructions in this manual
before using this equipment

! CAUTION

Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

| | |
|--------------------------------------|----|
| Important Safety Instructions----- | 3 |
| Instructions----- | 4 |
| Parts List----- | 5 |
| Exploded View ----- | 8 |
| Measurement Guide----- | 9 |
| Assembly Instructions----- | 10 |
| Assembly----- | 11 |
| Exercise Instructions----- | 19 |
| Maintenance Schedule----- | 20 |
| General Maintenance Information----- | 21 |
| Weight Training Tips----- | 22 |
| Specifications----- | 22 |

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- * Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.
- * Do not allow children on or near the equipment.
- * Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- * Wear proper exercise clothing and shoes for your workout----no loose clothing.
- * Be careful when getting on or off the equipment.
- * Do not overexert yourself or work to exhaustion.
- * If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- * Never operate the unit when it has been dropped or damaged.
- * Never drop or insert anything into any opening in the equipment.
- * Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
- * Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.
- * Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- * Do not attempt to lift more weight than you can control safely.
- * Do not use the equipment outdoors.

Personal Safety During Assembly


- * Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- * Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Instructions


Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


Tools Required

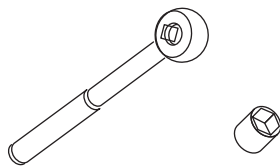


Ratchet Wrench and Socket

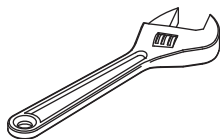

Adjustable Wrench

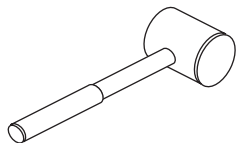

Rubber Mallet

 

Hex Key Wrench Set

Parts List

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

| Item NO. | Part NO. | Description | Qty |
|----------|--------------|---|-----|
| 1 | IF81010100 | Weight Stack Frame | 1 |
| 2 | IF81010200 | Main Frame | 1 |
| 3 | IF81010300 | Leverage Arm | 1 |
| 4 | IF81010400 | Lower Crossbeam | 1 |
| 5 | IF81010500 | Upper Crossbeam | 1 |
| 6 | IF81010600 | Seat Pad Support | 1 |
| 7 | IF81010700 | Back Pad Support | 1 |
| 8 | IF81010800 | Back Pad Frame | 1 |
| 9 | CWRVL0014000 | Y Bracket | 2 |
| 10 | IF81161400 | Guide Rod $\phi 25 \times 2.5 \times 1229$ | 2 |
| 11 | IF81223900 | Mount Sleeve $\phi 40 \times 25$ | 2 |
| 12 | IF81211900 | Shaft I | 1 |
| 13 | IT81212000 | End Cap | 2 |
| 14 | IF81010900 | Cable | 1 |
| 15 | IF81222400 | Seat Pad | 1 |
| 16 | IF81011100 | Back Pad | 1 |
| 17 | IF81163500 | Selector Pin W/Coil | 1 |
| 18 | H2-A070 | Spacer $\phi 10 \times \phi 14 \times 20$ | 1 |
| 19 | IF81162700 | Plastic Plate | 2 |
| 20 | IF81162000 | Foot Cover | 4 |
| 21 | B5010300 | Adjustable Screw | 1 |
| 22 | IF81211500 | Front Shroud | 1 |
| 23 | IF81211600 | Rear Shroud | 1 |
| 24 | IF81162200 | Top Shroud | 1 |
| 25 | IF81162100 | Shroud Clip | 4 |
| 26 | PTSHILO12800 | Weight Rubber Bumper $\phi 76.2 \times \phi 26.9 \times 38.1$ | 2 |
| 27 | GB2766005-2Z | Bearing 6005-2Z | 2 |
| 28 | SG500110400 | 4.5" Pulley | 5 |
| 29 | IF81222000 | Cover | 2 |
| 30 | IF81222100 | Pin | 2 |
| 31 | IF81222300 | Spring | 2 |
| 32 | BNH0004 | Plug $\phi 50.8$ | 2 |
| 33 | KFFID2800 | Plug $\square 50.8 \times 76.2$ | 2 |
| 34 | KFCR1800 | Plug $\square 25.4 \times 76.2$ | 4 |
| 35 | KF18606200 | Plug $\square 50.8$ | 1 |
| 36 | IF81212300 | Plastic Knob - Cap | 2 |
| 37 | IF81212400 | Plastic Knob - Base | 2 |
| 38 | RPL52015000 | Grip $\phi 36 \times \phi 28 \times 475$ | 2 |
| 39 | HF1651600 | Glide Sleeve $\square 50 \times \square 38$ | 4 |

Parts List

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

| Item NO. | Part NO. | Description | Qty |
|----------|-------------------|--------------------------------------|-----|
| 40 | IF81212700 | Nut | 2 |
| 41 | PL90165400 | Top Plate | 1 |
| 44 | GB5780M10*105DS20 | Hex Head Bolts M10*105 | 8 |
| 45 | GB5780M10*50DS20 | Hex Head Bolts M10*50 | 10 |
| 46 | GB5781M10*30DS20 | Hex Head Bolts M10*30 | 2 |
| 47 | GB5780M10*45DS20 | Hex Head Bolts M10*45 | 1 |
| 48 | GB70M8*20DS2 | Socket Head Cap Screw M8*20 | 2 |
| 49 | PNLM6*40DS20 | Button Head Cap Screw M6*40 | 2 |
| 50 | PNLM6*15DS2 | Button Head Cap Screw M6*15 | 2 |
| 51 | GB819M5*15DS2 | Flat Philips Screw M5*15 | 12 |
| 52 | CNLM10*30*30DS2NL | Flat Head Cap Screw M10*30 | 2 |
| 53 | CNLM10*25*25DS2NL | Flat Head Cap Screw M10*25 | 2 |
| 54 | GB77M8*8DS18 | Socket Set Screw M8*8 | 4 |
| 55 | DQ10DS2A | Flat Washer $\phi 11 * \phi 23 * 2$ | 37 |
| 56 | DQ6DS2A | Flat Washer $\phi 6.6 * \phi 15 * 6$ | 2 |
| 57 | NM10DS2 | Nylon lock Nut M10 | 16 |
| 58 | NM6DS2 | Nylon lock Nut M6 | 2 |
| 59 | GB41M10DS2 | Hex Nut M10 | 1 |
| 60 | NBS6DHS | Hex Key s=6 | 1 |
| 61 | NBS5DHS | Hex Key s=5 | 1 |
| 62 | NBS4DHS | Hex Key s=4 | 1 |
| 63 | LW200BS | Wrench | 1 |
| 64 | YHY | Lube | 1 |

Parts List-Weight Plates

! There are three configuration of weights: 170LBS/200LBS/250LBS, please see following form for details.

Weight Plate 170LBS

| Item No. | Part No. | Description | Qty |
|----------|----------|--------------------|-----|
| 42 | PLWS1000 | Weight Plate 10LBS | 16 |


Weight Plate 200LBS

| Item No. | Part No. | Description | Qty |
|----------|-----------|--------------------|-----|
| 42 | PLWS1000 | Weight Plate 10LBS | 10 |
| 43 | IF8WS1500 | Weight Plate 15LBS | 6 |


Weight Plate 250LBS

| Item No. | Part No. | Description | Qty |
|----------|-----------|--------------------|-----|
| 43 | IF8WS1500 | Weight Plate 15LBS | 16 |


Exploded View

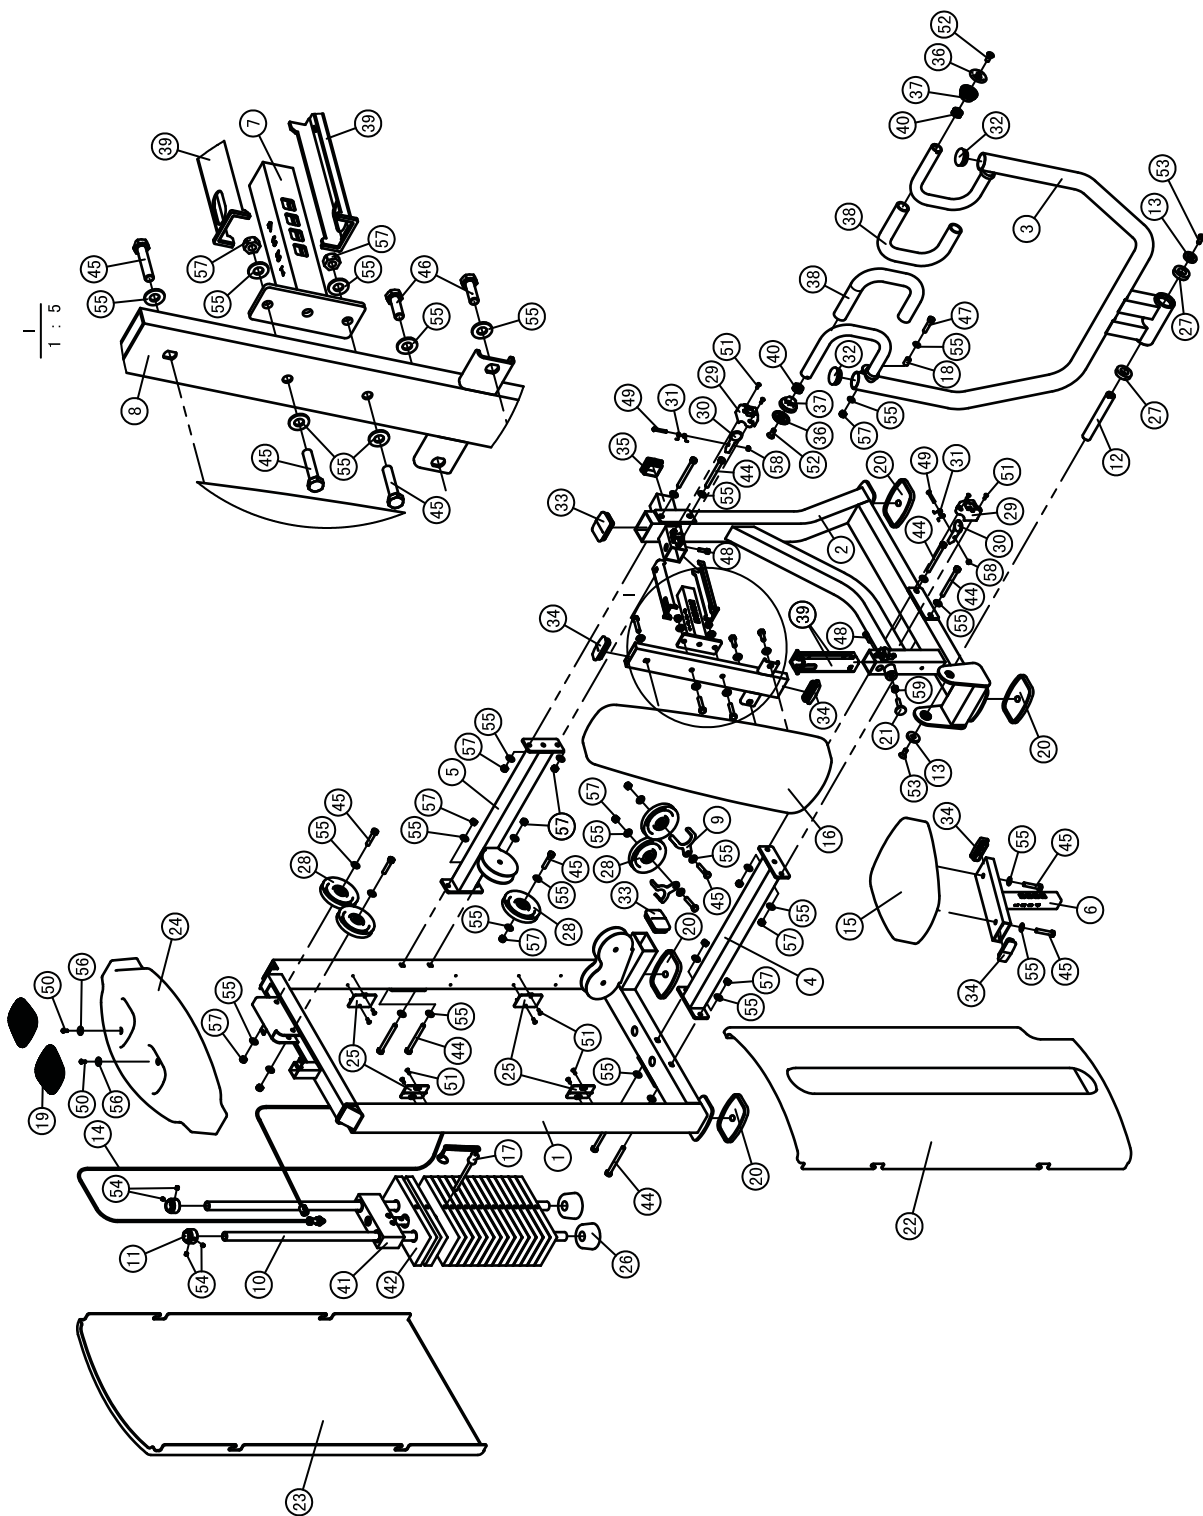


Measurement Guide

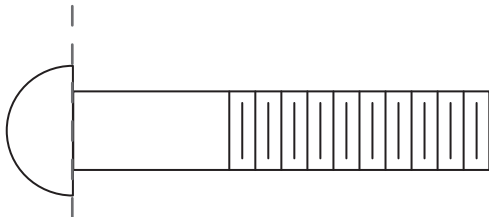


BHCS = Button Head Cap Screw

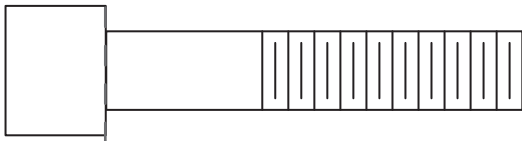


SHCS = Socket Head Cap Screw

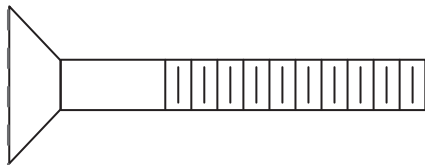


FHCS = Flat Head Cap Screw

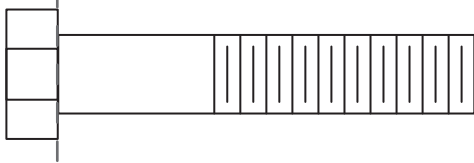

HHB = Hex Head Bolt

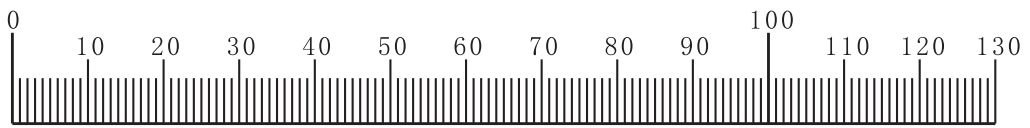

Millimeters

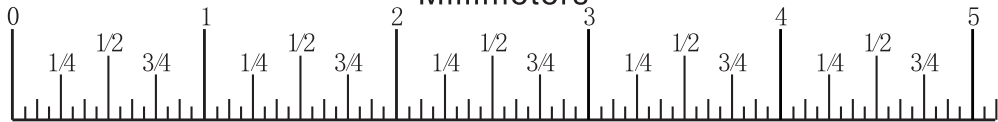

Inches

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.



Note

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

Assembly

Step 1

1. Attach the Lower Crossbeam (#4) and the Upper Crossbeam(#5),the Main Frame (#2)to the Weight Stack Frame (#1) using :

eight M10*105 HHB(#44)


sixteen $\Phi 11*\Phi 23*2$ Flat Washers (#55)

eight M10 Nylon Lock Nut (#57)

2. Attach four Shroud Clips (#25) to the Weight Stack Frame (#1) using :

eight M5*15 Flat Philips Screws (#51)


Note:Hand tighten bolts and nylon lock nuts until machine is fully assembled.

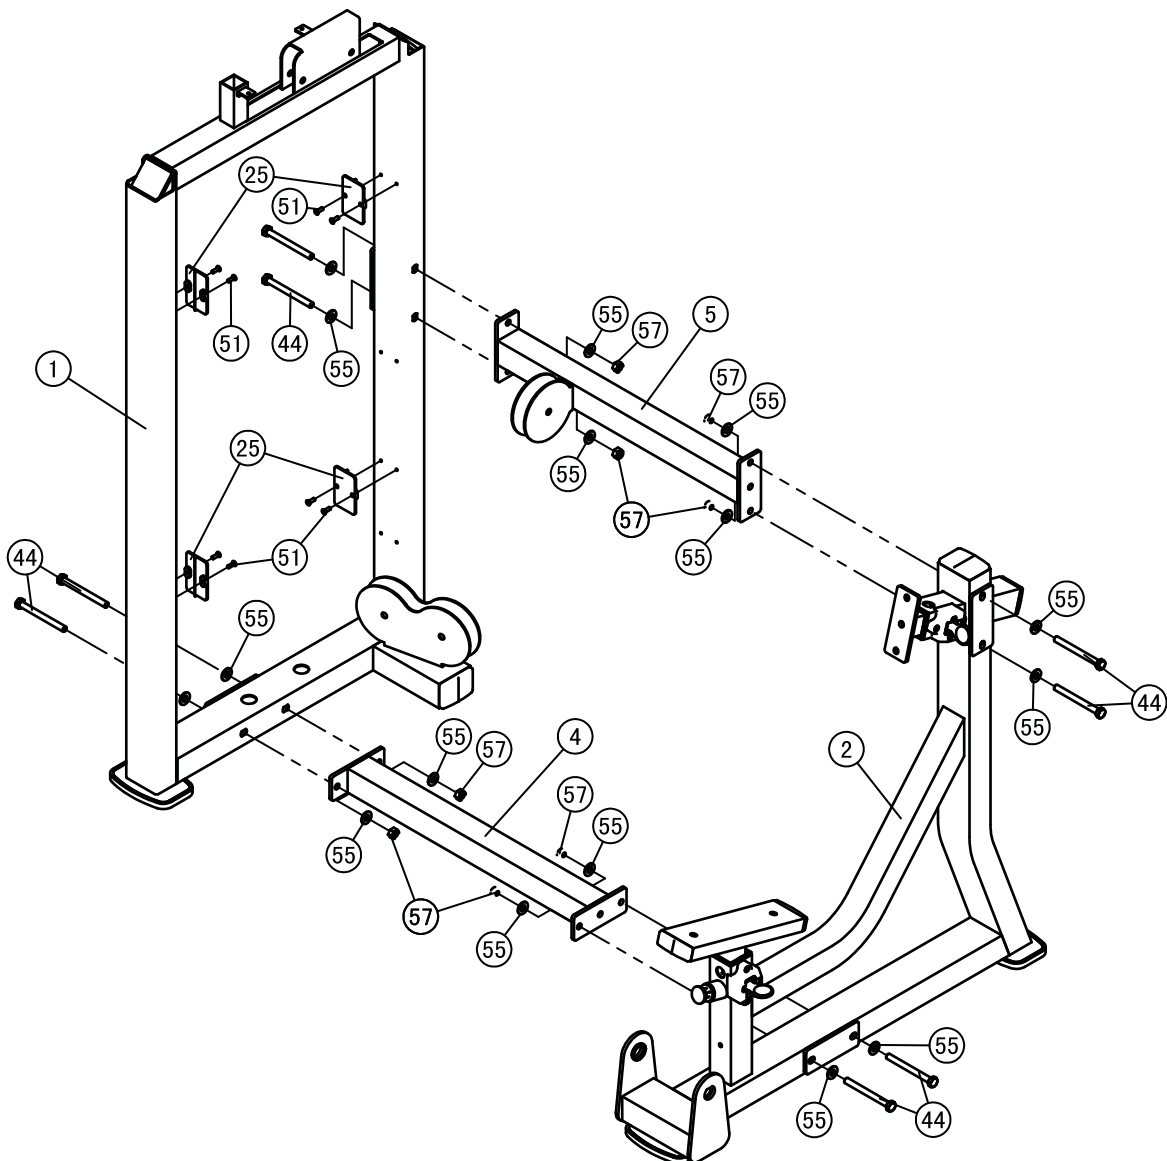

Assembly

Step 2

Attach the Leverage Arm (#3) to the Main Frame (#2) using :
two M10*25 Flat Head Cap Screws (#53) two $\Phi 38*6$ End Caps (#13)
one $\Phi 25*178$ Shaft I (#12)

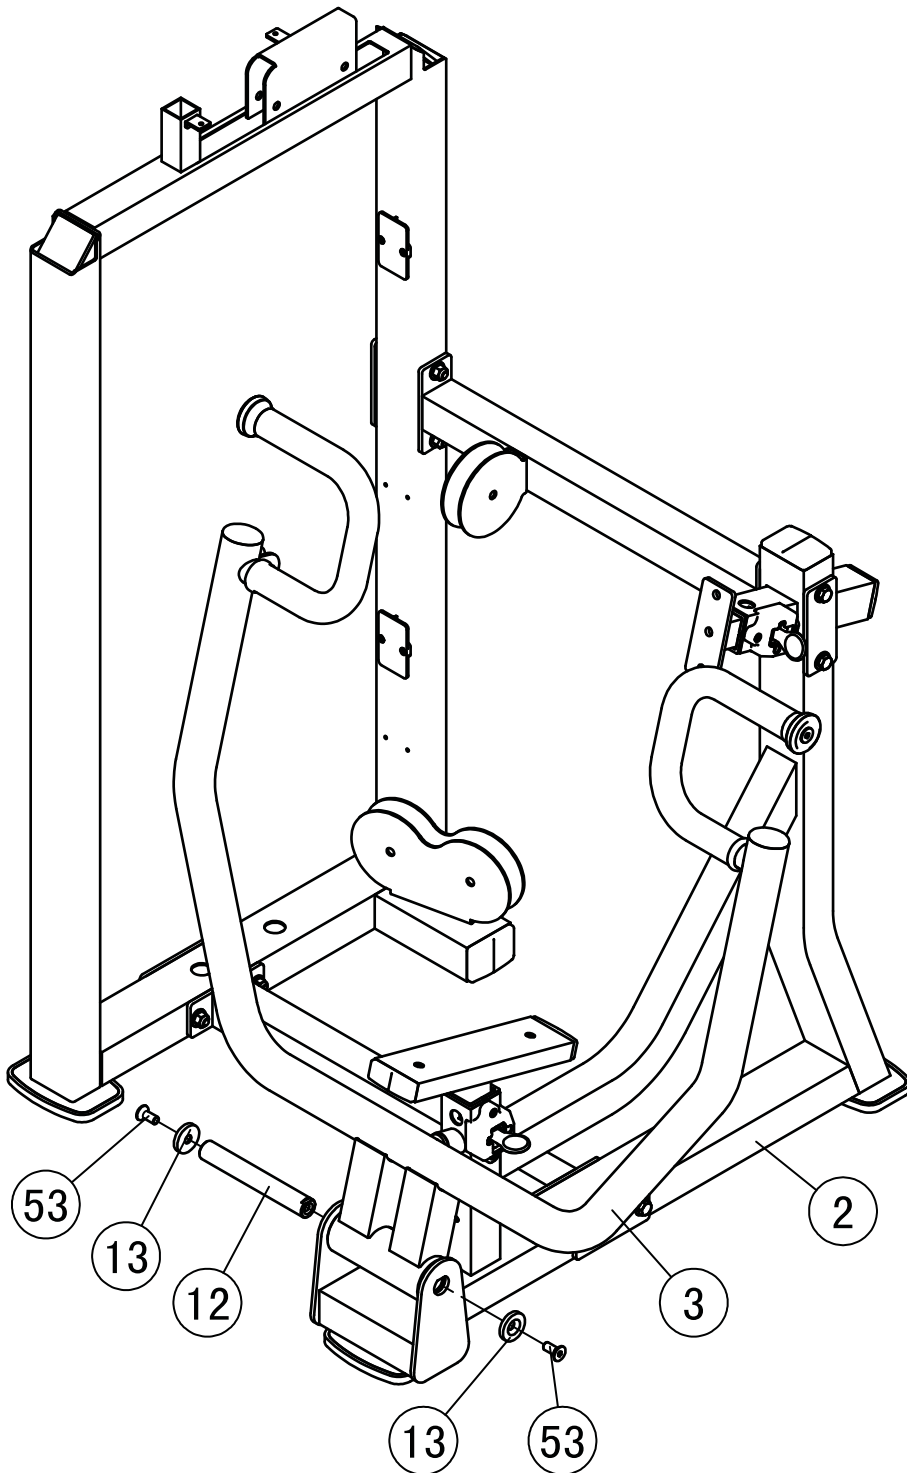

Assembly

Step 3


1. Attach four 4.5" Pulley (#28) to the Weight Stack Frame (#1) using :

| | |
|-------------------------------|--|
| four M10*50 HHB (#45) | eight $\Phi 11*\Phi 23*2$ Flat Washers (#55) |
| four M10 Nylon Lock Nut (#57) | two Y Bracket (#9) |
2. Attach one 4.5" Pulley (#28) to the Upper Crossbeam (#5) using :

| | |
|------------------------------|--|
| one M10*50 HHB (#45) | two $\Phi 11*\Phi 23*2$ Flat Washers (#55) |
| one M10 Nylon Lock Nut (#57) | |
3. Attach the Cable(#14) to the Leverage Arm (#3) using :

| | |
|------------------------------|--|
| one M10*45 HHB (#47) | two $\Phi 11*\Phi 23*2$ Flat Washers (#55) |
| one M10 Nylon Lock Nut (#57) | one Spacer $\Phi 10*\Phi 14*20$ (#18) |

Note: Hand tighten bolts and Nylon lock nuts until machine is fully assembled.

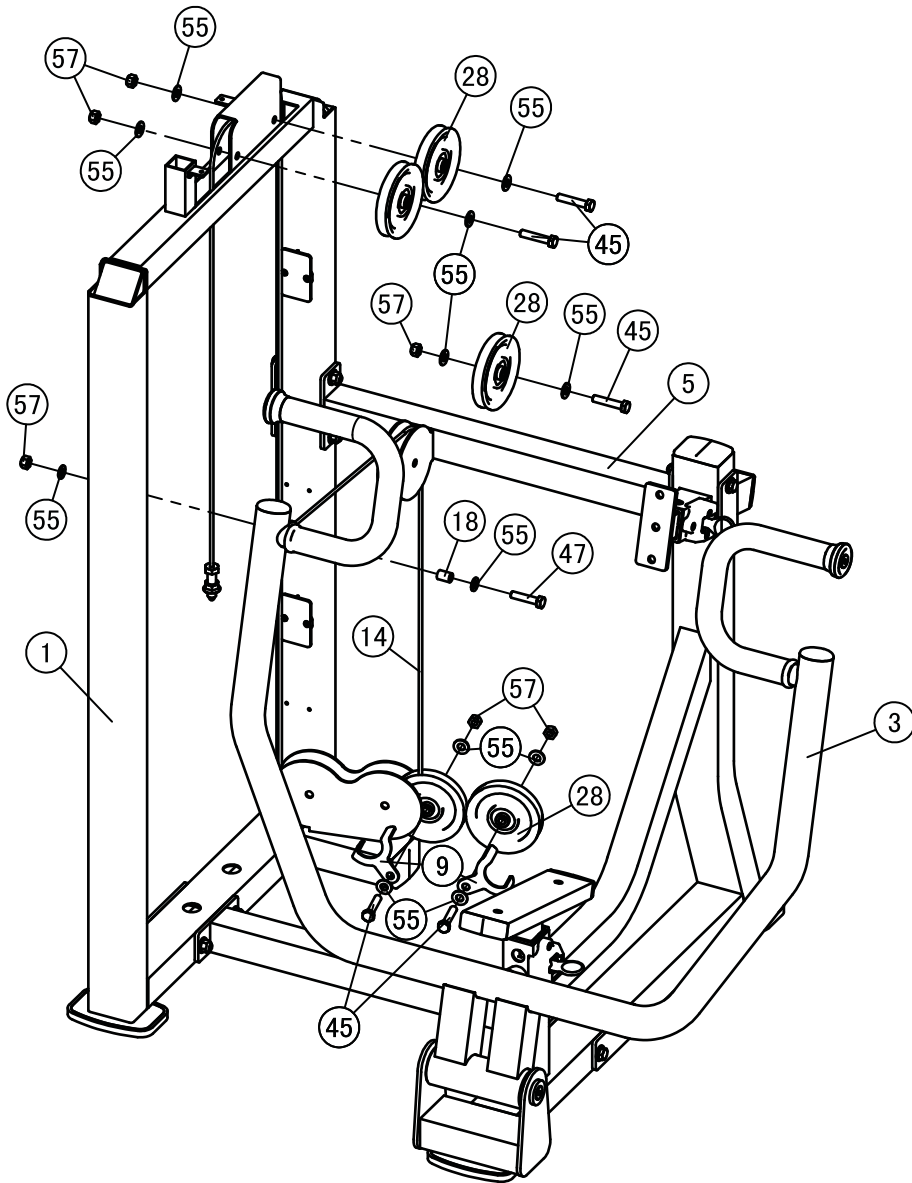

Assembly-170LBS

Step 4

1. Attach:

two $\Phi 25 \times 2.5 \times 1229$ Guide Rod (#10) two $\Phi 76.2 \times \Phi 26.9 \times 38.1$ Weight Rubber Bumper(#26)
sixteen 10LBS Weight Plate (#42) one Top Plate (#41)

to the Weight Stack Frame (#1) using :


two $\Phi 40 \times 25$ Mount Sleeve (#11) four M8*8 Socket Set Screws(#54)

2. Attach the Selector Pin W/Coil (#17) to the Top Plate (#41)

3. Attach the Cable(#14) to the Top Plate (#41).

Note: Hand tighten bolts and nylon lock nuts until machine is fully assembled.

*Here is the assembly instruction for 170LBS weights.
Please assemble according to the actual weights you buy.*

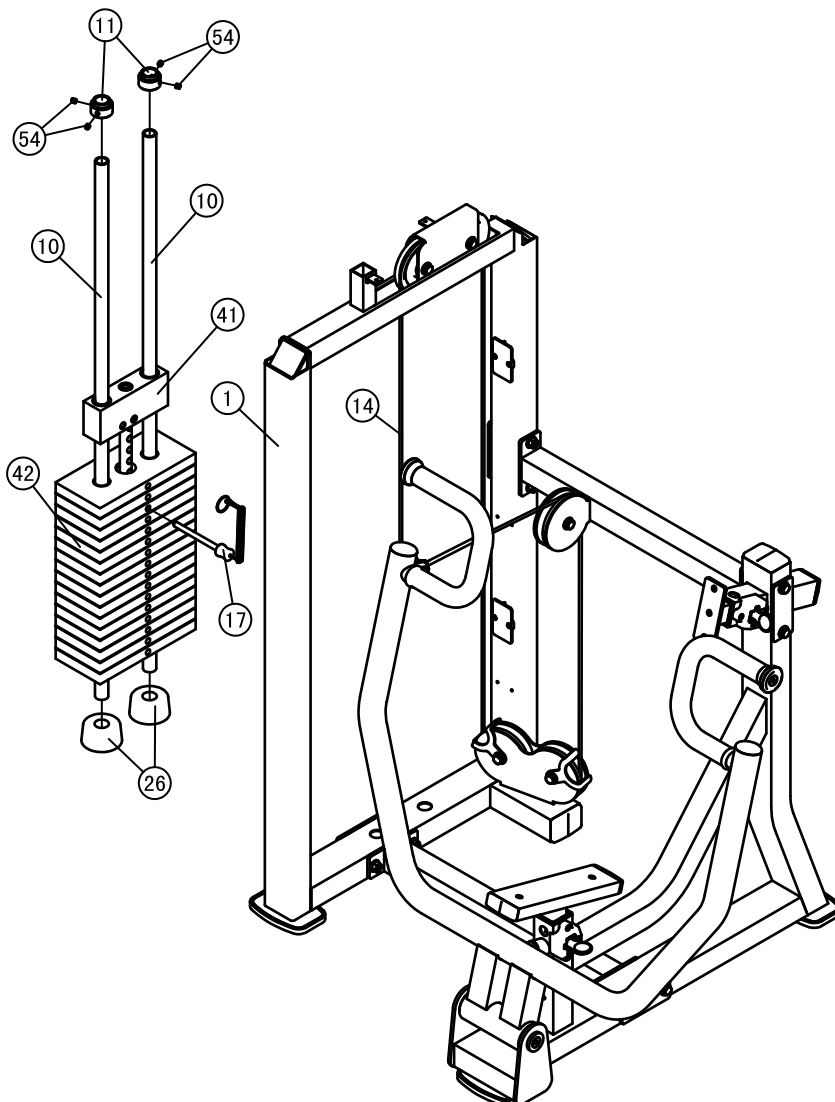

Assembly-200LBS

Step 4

1. Attach:

two $\Phi 25 \times 2.5 \times 1229$ Guide Rod (#10)

ten 10LBS Weight Plate (#42)

one Top Plate(#41)

two $\Phi 76.2 \times \Phi 26.9 \times 38.1$ Weight Rubber Bumper (#26)

six 15LBS Weight Plate (#43)

to the Weight Stack Frame(#1)using :

two $\Phi 40 \times 25$ Mount Sleeve (#11)


four M8*8 Socket Set Screws(#54)

2. Attach the Selector Pin W/Coil (#17) to the Top Plate (#41)

3. Attach the Cable(#14) to the Top Plate (#41).

Note: Hand tighten bolts and nylon lock nuts until machine is fully assembled.

*Here is the assembly instruction for 200LBS weights.
Please assemble according to the actual weights you buy.*

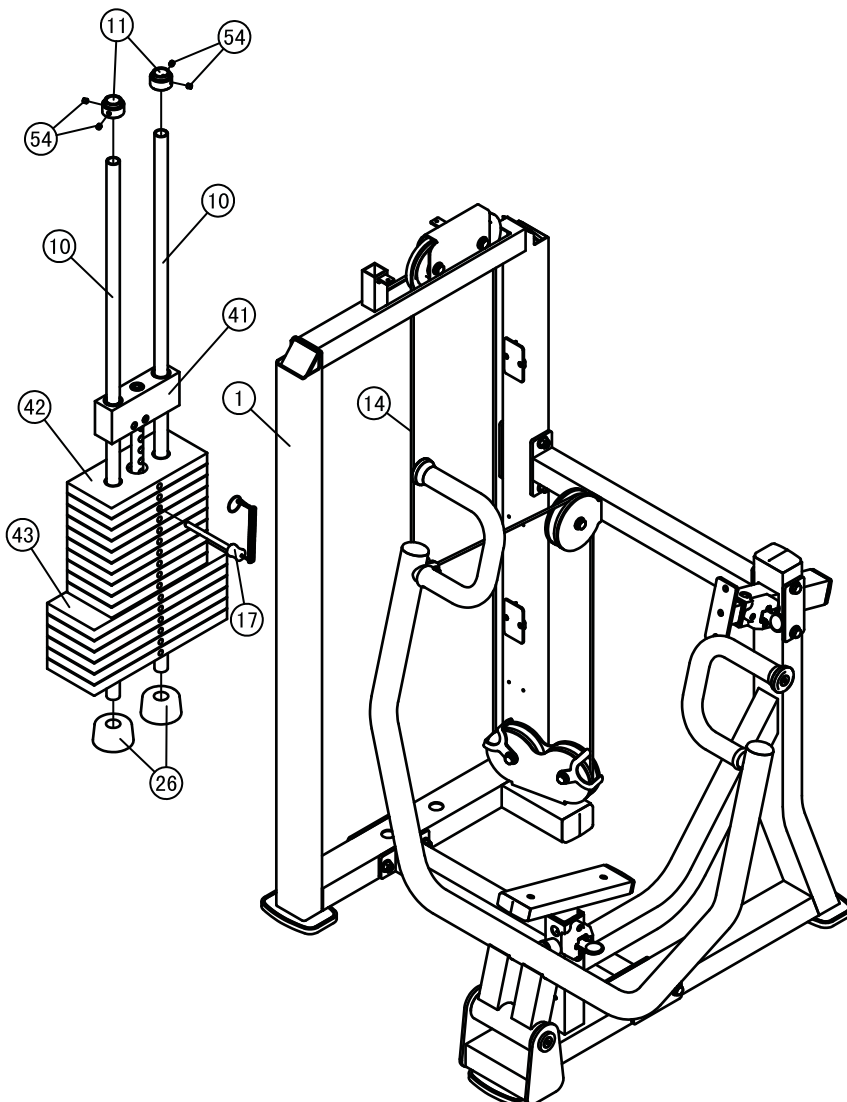

Assembly-250LBS

Step 4

1. Attach :

two $\Phi 25 \times 2.5 \times 1229$ Guide Rod (#10)

sixteen 15LBS Weight Plate (#43)

two $\Phi 76.2 \times \Phi 26.9 \times 38.1$ Weight Rubber Bumper(#26)

one Top Plate (#41)

to the Weight Stack Frame (#1) using :

two $\Phi 40 \times 25$ Mount Sleeve (#11)


four M8*8 Socket Set Screws(#54)

2. Attach the Selector Pin W/Coil (#17) to the Top Plate (#41)

3. Attach the Cable(#14) to the Top Plate (#41).

Note:Hand tighten bolts and nylon lock nuts until machine is fully assembled.

*Here is the assembly instruction for 250LBS weights.
Please assemble according to the actual weights you buy.*

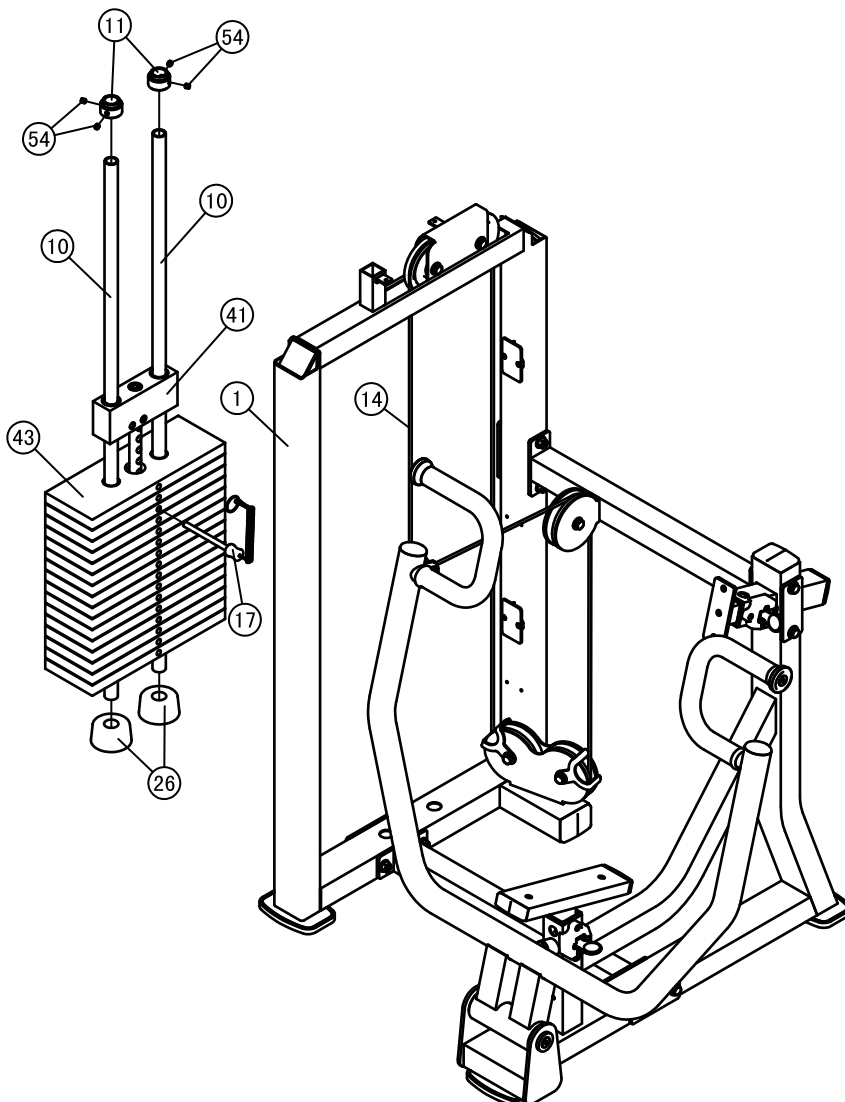


Assembly

Step 5


1. Attach the Back Pad Frame (#8) to the Back Pad Support (#7) using:
two M10*50 HHB (#45) four Φ 11* Φ 23*2 Flat Washers (#55)
two M10 Nylon Lock Nut (#57)
2. Attach the Seat Pad (#15) and the Back Pad (#16) to the Seat Pad Support (#6) and the Back Pad Frame (#8) using:
three M10*50 HHB (#45) two M10*30 HHB (#46)
five Φ 11* Φ 23*2 Flat Washers (#55)

Note: Hand tighten bolts and nylon lock nuts.

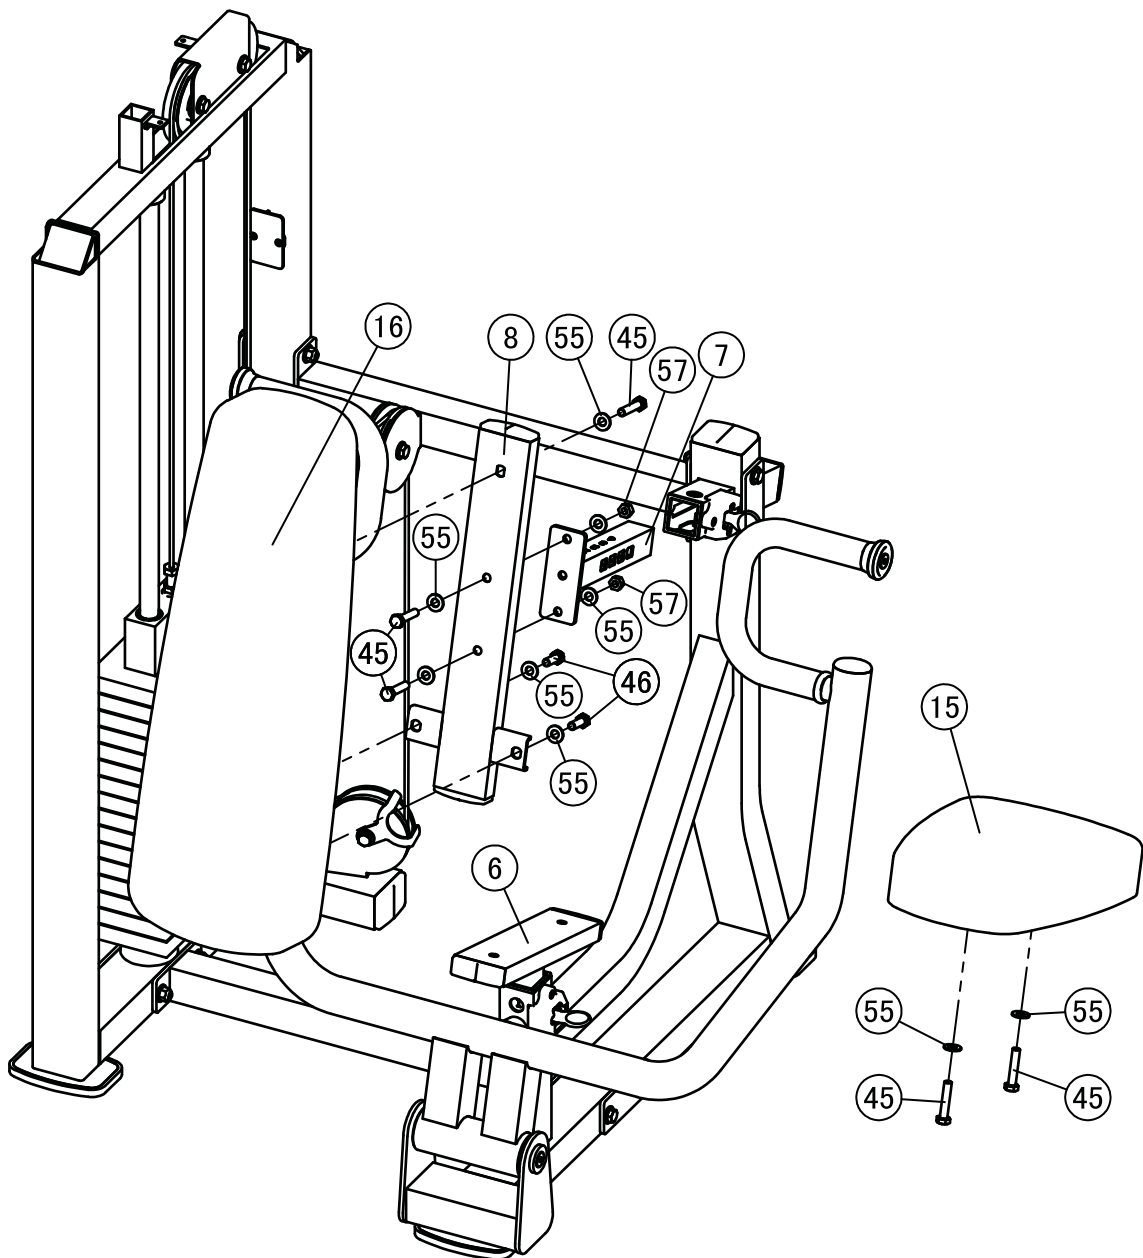


Exercise Instructions


CHEST PRESS

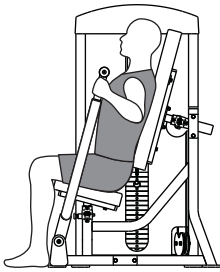


Start

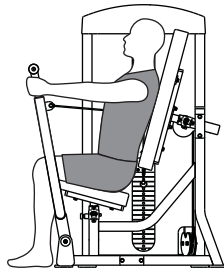

Finish

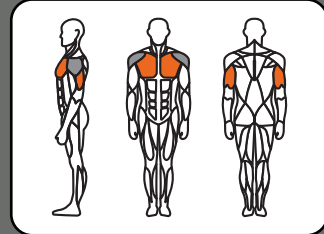

- 1 Select an appropriate weight.
- 2 Adjust seat pad and back pad to desired position, then hold handle bar, and press forward with a control motion.
- 3 Slowly return to the starting position.

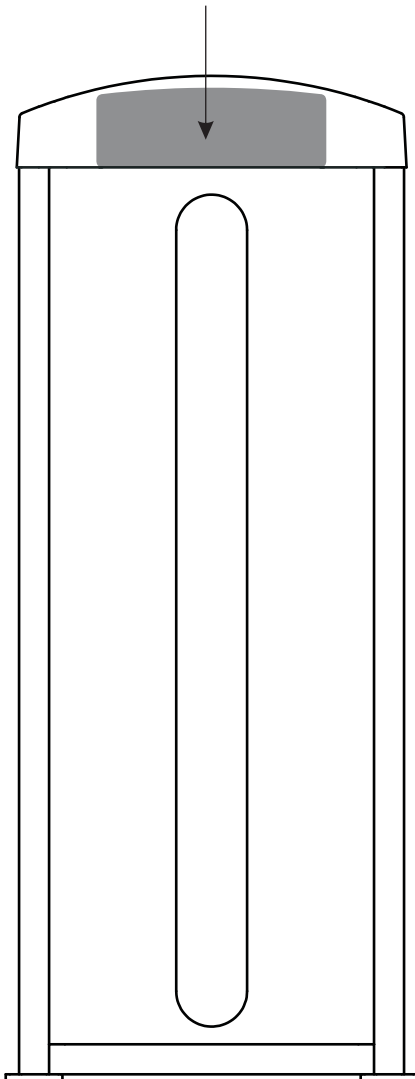

Exercise Instructions

1. Select an appropriate weight.
2. Adjust seat pad and back pad to desired position, then hold handle bar, and press forward with a control motion.
3. Slowly return to the starting position.

(Adjust weight according to the select pin)

Maintenance Schedule

| ROUTINE | COMMERCIAL MAINTENANCE | HOME MAINTENANCE | LATEST DATE ENTRY | | | | | |
|--|---------------------------|---------------------|-------------------|--|--|--|--|--|
| | | | | | | | | |
| Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins | DAILY | WEEKLY | | | | | | |
| Clean; Upholstery | DAILY | WEEKLY | | | | | | |
| Inspect; Cables or Belts and their tension | DAILY | WEEKLY | | | | | | |
| Inspect; Accessory Bars, and Handles | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; All Decals | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; All Nuts and Bolts, Tighten if needed | WEEKLY | 3 MONTHS | | | | | | |
| Inspect; Anti-Skid Surface | WEEKLY | 3 MONTHS | | | | | | |
| Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube) | MONTHLY | 3 MONTHS | | | | | | |
| Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing | MONTHLY | 3 MONTHS | | | | | | |
| Clean and Wax; All Glossy Finishes | 6 MONTHS | YEARLY | | | | | | |
| Repack with Grease; Linear Bearings | 6 MONTHS | YEARLY | | | | | | |
| Replace; Cables, Belts and Connecting Parts | YEARLY | 3 YEARS | | | | | | |

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or worn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

- *Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- *These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *We use only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolt attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- *Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. Repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

This unit is for gyms, Please consult with a training instructor before using.

Specifications

1. Class: S
2. Maximum Wt. Capacity: 113Kg/ 250lbs.
3. Maximum Load of Trainer: 150Kg/ 330lbs.

