

Инструкция Пресс-машина Bronze Gym D-010

Полезные ссылки:

Пресс-машина Bronze Gym D-010 - смотреть на сайте
Пресс-машина Bronze Gym D-010 - читать отзывы

D SERIES -010 USE MANUAL ABDOMINAL MACHINE



CONTENT

IMPORTANT DECLARATION	1
WARNING	2
USE INSTRUCTION	3
REGULAR MAINTENANCE.	4
CABLE ROUTING DIAGRAM	5
EXPLODED PICTURE	6
ASSMBLE STEP.	7

IMPORTANT DECLARATION:

First we are highly appreciated that you buy **D-010 ABDOMINAL MACHINE.**

For your health and safe, before you exercise please consult from your doctor and define a appreciated exercise burden for yourself. Before using this equipment read carefully all related instructions and notice. In this way you gain more happiness during exercise. When you begin to use **D-010 ABDOMINAL MACHINE**, our company think you have read use manual already.

After you buy this equipment, please fill carefully 'post-sale service warranty card' and keep it, meanwhile, post return receipt (stub) back to our company so that we provide better service for you.

This manual is the first edition 2011 of series products **D-010 ABDOMINAL MACHINE S.**The content of manual will change along with promotion of products, and we will not inform you.

All notice and instruction are in order to keep yoafe and use this equipment correctly. If not obeying the suggestion, take the consequence yourself.

After reading, the user must keep this manual in the place you can see it at anytime.

PRODUCTS INTRODUCTION:

- 1 The main frame adopts the high-quality steel tube of for use, durable and safe.
- 2 Adopt high strength steel cable as transmitting wire and you will feel safe and durable.
- 3 The weight stack adopts casting iron and has protective cover.
- 4 Rotating part adopts the high-quality bearing, durable in use and there is no noise while using.
- 5 The high quality leader makes it smoother while using.

WARNING

- 1. This training equipment is only intended for use in training areasof organizations such as sport associations, educational establishment, hotels, clubs and studios, where access and control is specifically regulated by the owner (person who has the legal responsibility).
- 2. The training equipment shall only be used in areas where access control is specifically regulated by the owner; the extent of control depends on the users, e.g. degree of reliability, age, experience, etc.
- 3. The training equipment shall only be used in supervised areas.
- 4. Always keep unsupervised children and disabled away from the equipment.
- 5. Injury to health may result from incorrect or excessive training, please consult the couch to choice correct exercise method and proper burden.
- 6. Please adjust the load and equipment further (e.g. seat adjustment) before using.
- 7. Please check if the bolt and handrail are out of work before you start to use it.
- 8. When weight stacks, booms and other parts of this equipment are blocked, must handle with other people's assistance, in case that the weight stacks may suddenly drop and cause accident.
- 9 .Adjust the length of the steel cable properly and never make the steel wire rope twist. After using the machine for a period, the owner shall check the steel cable to make sure no unusual phenomena in connecting. When meet any problems, please consult the professional maintenance personal at once.
- 10. Do not suddenly drop the weight stack. In order to avoid destroying other weight stacks, please raise it when the weight stacks nearly collide.
- 11. While using, forbid hands stretching into the weight stacks or the relative motion parts, so as not to injure the finger.
- 12. Never allow person with heart disease and children under 12 to use this equipment.
- 13. The training equipment is in compliance with EN 957-2 class S(S=studio);
- 14. The max training weight is 150kgs (330pound). The max user's body weight is 150kg (330pound).
- 15. The machine should be located stably. A space of 2000mm*2000mm should be around the machine.
- 16. The scope of products: Primary use in professional fitness club. The second is the residence community, gym of some company
- 17. If you feel swirl, surfeit and other discomfort sense, Please stop exercising and go for doctor.
- 18. The equipment should be installed on stable even surface.
- 19. The machine shall only be used indoor and be avoid of moisture.
- 20. Wear right shoes and coat
- 21. Warm up before exercising
- 22. Don't use the equipment to do the impossible function
- 23. Please exercise under instruction by professional coach.
- 24. Inspect if the equipment is fastness before using
- 25. Any of the adjustment devices that could interfere with the user movement should not be left projecting.

USE INSTRUCTION:



D-010 ABDOMINAL MACHINE

Exercise position: Abdominal Muscles

Dimension: 1220mm (L)*1160mm(W)*1470 mm(H) weight: 170kg

Use Instruction:

- 1 Read all caution Warning Labels before using this equipment.
- 2 Adjust seat pad and sit with your back firmly against back pad.
- 3 Insert pin into weight stack at desired resistance level.
- 4 Hold the lever firmly, securely position both hands in an overhand grip or with palms facing each other.
- 5 Keeping your arms close to your sides, slowly push forward while maintaining a smooth, comfortable exercise movement.
- 6 Parse for a moment, then slowly return to the start position and repeat the movement.

NOTICE:

- 1.Warm-up.....It needs warm-up for 5-10 minutes before starting exercise, for instance mark time, free-standing exercises etc., in order to move each joint muscle, so as not to injure the joint muscle while exercising.
- 2 DietEat some more protein, vegetables, and fruit. Begin to do exercises until 40 minutes after a meal. Taking food until half an hour after doing exercises and drink little water while doing exercise.
- 3.Breath......Breathe in while exerting oneself, exhale while relaxing. To coordinate breathe with movement.
- 4 Frequency...It needs to take a rest over 48 hours before exercising the same muscle.
- 5 Burden......Exerciser should choose suitable weight according to one's own actual conditions, make sure not to be overweight, so as not to cause the muscle to draw wounded. Exercises should according to the progressive principle; it is normal to feel ache while exercise for the first time.

REGULAR MAINTENANCE

- 1. The safety level of the equipment can be maintained only if it is examined regularly for damage and wear, e.g. ropes, pulleys, connection points;
- 2. Pay special attention to components most susceptible to wear.
- 3. Replace defective components immediately and /or keep t he equipment out of use until repair;
- 4. This equipment should carry on regular maintenance according to the following chart:

MAINTENANCE	EVERYDAY	EVERY WEEK	THREE MONTHS
Check: connecting, bolt, Weight stack bolt	V		
Clearance:	V		
cushion and cover			
Lubrication:			$\sqrt{}$
place of sliding			
Check:		$\sqrt{}$	
bolt if tighten			
Lubrication:			$\sqrt{}$
Bracket of bearing			

INSTALL SKETCH MAP


Let assembly become easier

All the content of user's manual is to assured the strength training machine can be installed more easily


Reading the details and instructions before installing:

- 1. Because the size and weight of equipment is so large, Please choose the installed place near the desired station and assured there is enough space to exercise
- 2. All parts can be put on the clear area, then backout the wrapper. And the wrapper can't be through away before installation finished.
- 3. Screw the bolt tightly except the additional instruction
- 4. All parts must be installed according the illustration indication.
- 5. Installation work can be finished by tow men
- 6. Identify all parts by part identify chart

CABLE ROUTING DIAGRAM:

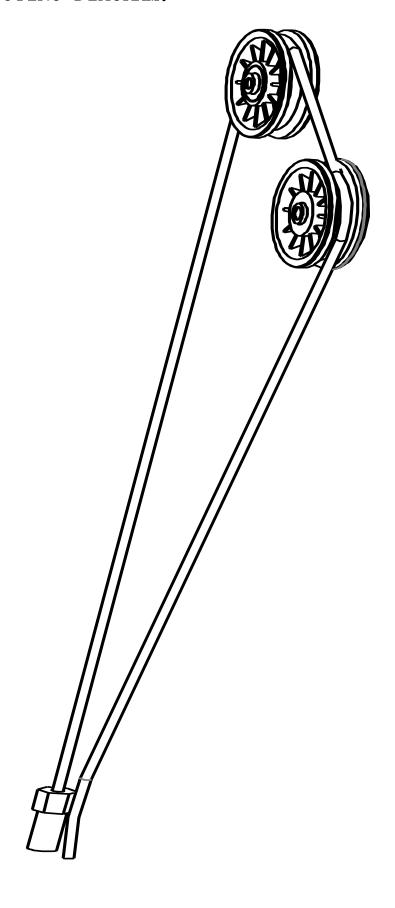

Exploded Picture

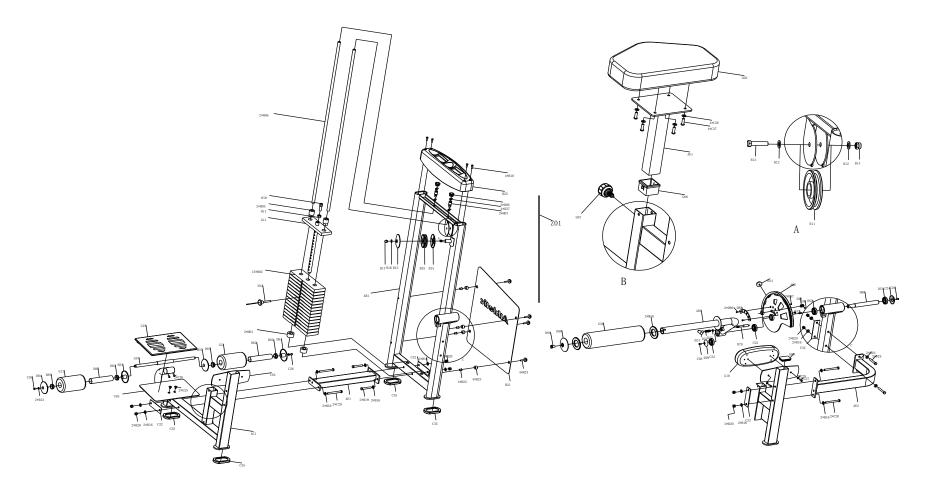


Assmble Step:

Use tool:


- 1. M5 Hex spanner
- 2. M6 Hex spanner
- 3. Two 17-19 spanner
- 4. Two 22-24 spanner



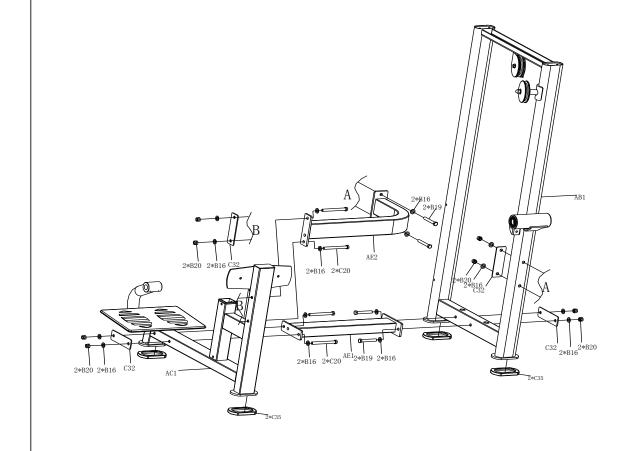


No.	Name	Size	Quantity
AB1	wicket welding group		1
AC1	main frame welding		1
AE1	welding group of upper		1
AE2	welding group of upper connection support		1
B16	spacer	M12*2t	16
B19	outer hexagon screw	M12*80L	4
B20	lock nut	M12	8
C35	connecting board	160L*50W*4t	4
C35	foot pad	136L*76W*3t	4
C20	outer hexagon screw	M12*120L	4




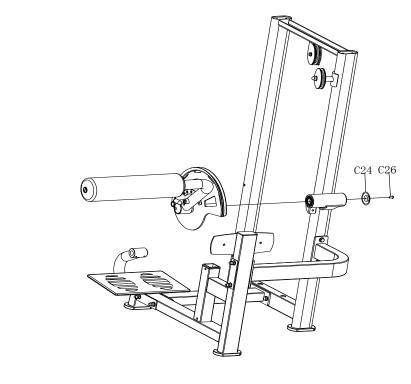


No.	Name	Size	Quantity
C24	bearing cap	M70	1
C26	semi-circle inner hexagon screw	M8*16L	1
AD1	foam sleeve welding group		1
AD2	cam welding		1

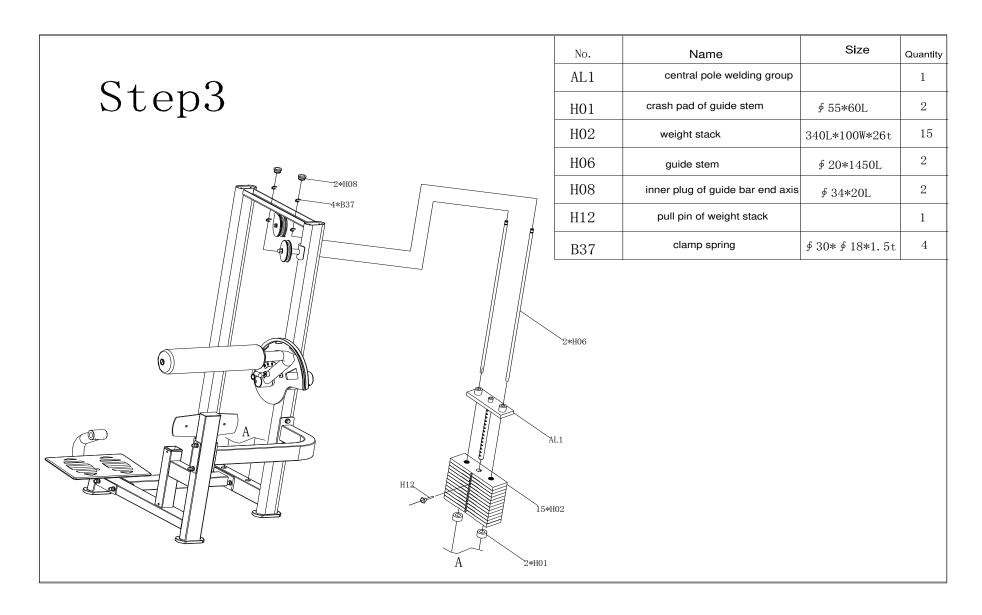


Step4

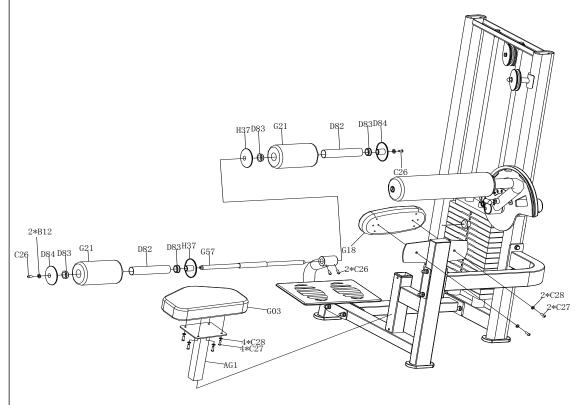

N.	Name	Size	Ougatitus
No.		Size	Quantity
AG1	seat frame welding		1
G03	cushion	A1	1
G18	cushion	D2	1
G21	small foam		2
C26	semi-circle inner hexagon screw	M8*15L	4
C27	inner hexagon screw	M8*25L	6
C28	spacer	M8*2t	6
G57	weight plate holder shaft	; ∂ 0*540L	1
D82	weight plate holder sleeve	i © 0.5*i © 92*1.5t	2
D83	weight plate holder plug	i € 0.2*12.5L	4
D84	end cap of weight plate holder	i 906*i 201.6*i 408*37L	2
H37	end cap of weight plate holder	i 906*i 201.6*37L	2
B12	spacer	M10*2t	2

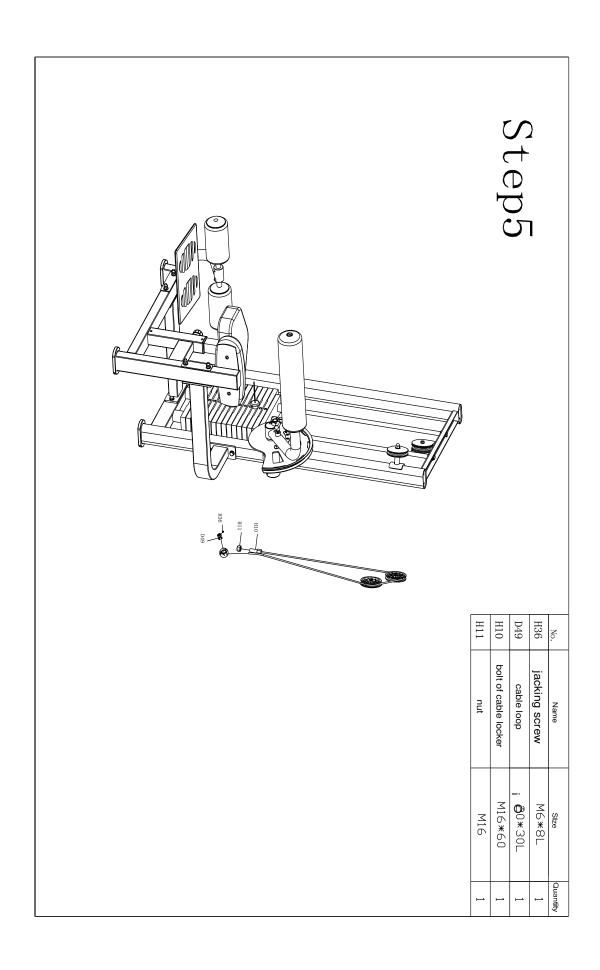

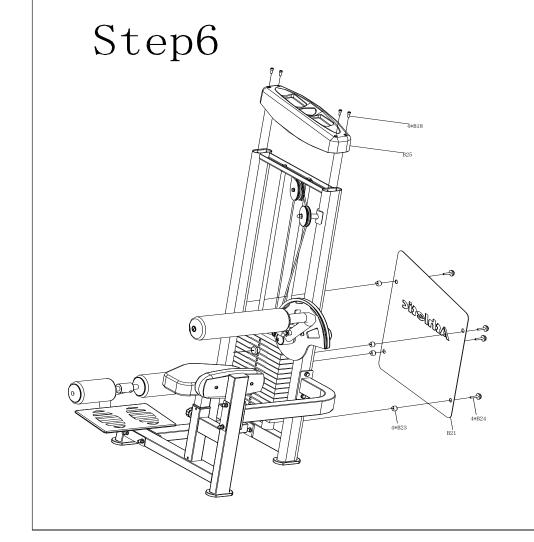

No.	Name	Size	Quantity
B18	inner hexagon screw	M8*20L	4
B25	cover	628L*155W*3t	1
B21	cover	677. 2L*620W*2t	1
B23	pull pin sleeve	i É 5*20L	4
B24	pin screw	j ś 0*M8*56L	4