


### Инструкция

### Сгибание ног с собственным весом (Бицепс бедра/Ягодичные) Impulse HSP7053

Полезные ссылки:

<u>Сгибание ног с собственным весом (Бицепс бедра/Ягодичные) Impulse HSP7053 -</u> смотреть на сайте

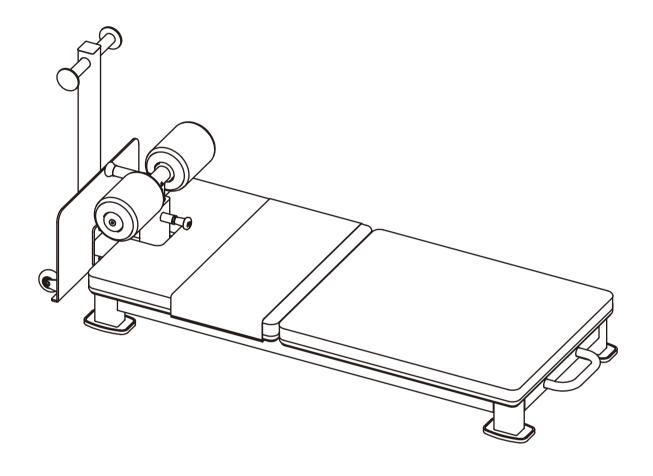

# HSP7053 Floor Glute

**OWNER'S MANUAL** 

# **Table Of Contents**

### **CAUTION!**

Read all precautions and instructions in this manual before using this equipment.

Important Safety Instructions	- 3
Instructions	- 5
Exploded View and Parts List	- 6
Measurement Guide	11
Assembly Instructions	12
Assembly	13
Adjust Instructions and Exercise Instructions	16
Maintenance Schedule	17
General Maintenance Information	18
Weight Training Tips	19

### **Important Safety Instructions**

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- 1. Read all instructions before using the equipment.

  These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.6 meters space around the product.

  Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.

  Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion. Do not attempt to lift more weight than you can control safely. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
- 6. This equipment is not used as medical apparatus and instruments.
- 7. Never operate the unit when it has been dropped or damaged. Never drop or insert anything into any opening in the equipment. Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition. Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear. Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


# **Important Safety Instructions**

### **Personal Safety During Assembly**

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

### **Training Area and Free Area**

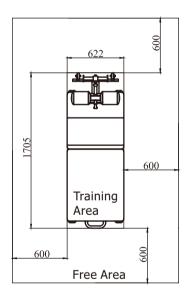

### **Specifications**

Class: S

Maximum User Weight: 150kg/ 330lbs Product Dimension: 1705\*622\*742mm Product Total Surface: 1705\*622mm


**Product Total Mass:** 

### **Instructions**

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.


# **Tools Required**

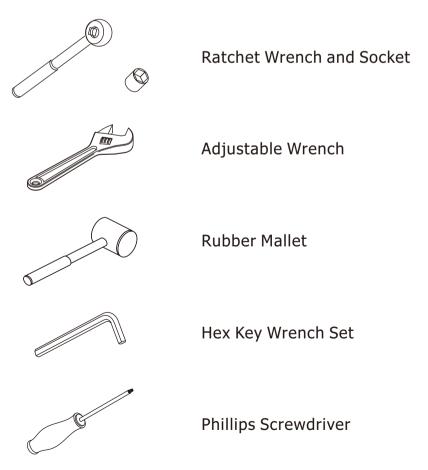


### **Overall**

ItemNo.	Grade No.	Part No.	Description	QTY
1	1	HSP705301ASSY	Base Frame ASSY	1
2	2	HSP705302ASSY	Regulation Support Frame ASSY	1
3	3	HSP705303ASSY	Regulation Frame ASSY	1
4	4	HSP705304ASSY	Front Support Frame ASSY	1
5	5	ABS701307ASSY	FOAM Tube ASSY	1
6	6	IE950221ASSY	FOAM	2
7	7	HSP70535100	Rectangle Pad	1
8	8	HSP70535200	Knee Pad	1
9	9	IE95029100	Plastic Ring Φ60*Φ26*12	2
10	10	IE950716500	Φ60*11.6 Aluminium Cap	2
11	11	GB9510DHS2	Flat Washer Φ11*Φ20*2	20
12	12	NM10DHS2	Nylon Lock Nut M10	6
13	13	CNLM10*35*35DS20	Flat Head Cap Screw M10*35	2
14	14	GB70M10*30DHS20	Socket Head Cap Screw M10*30	1
15	15	GB70M10*70DHS20	Socket Head Cap Screw M10*70	4
16	16	GB70M10*80DHS20	Socket Head Cap Screw M10*80	2
17	17	GB70M10*75DHS20	Socket Head Cap Screw M10*75	8
18	18	GB77M8*10N19	Socket Head Cap Screw M8*10	1
19	19	NBS8DHS	Hex Key S=8	1
20	20	NBS6DHS	Hex Key S=6	1
21	21	NBS4DHS	Hex Key S=4	1
22	22	LW200BS	Wrench	1

### **Overall**

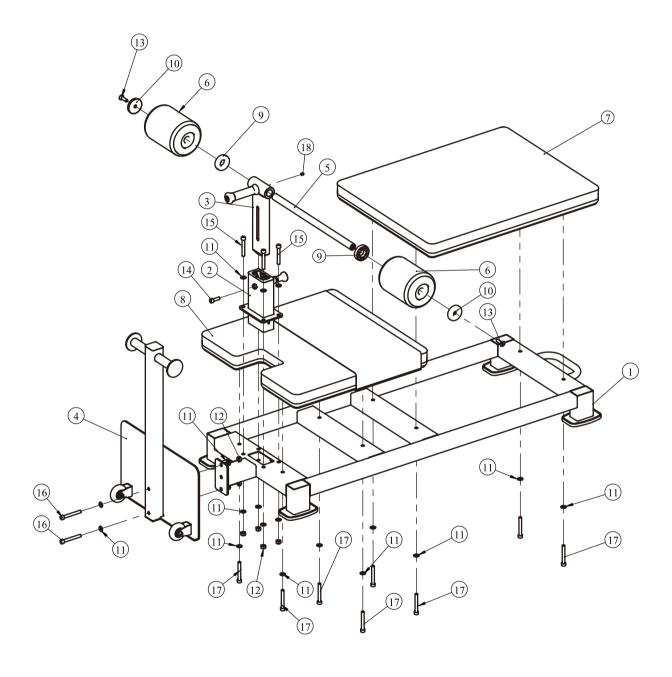

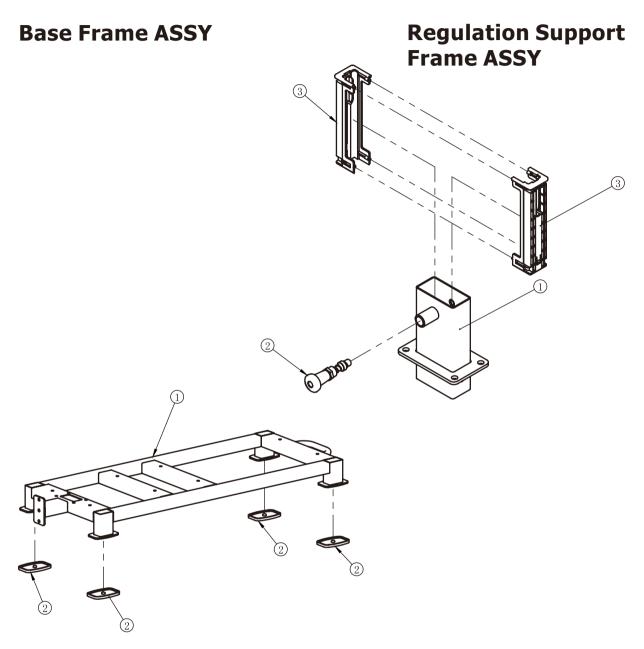


ItemNo.	Grade No.	Part No.	Description	QTY
1	1.1	HSP70530100	Base Frame	1
2	1.2	IF81162000	Rubber Foot	4

ItemNo.	Grade No.	Part No.	Description	QTY
1	2.1	HSP70530200	Regulation Support Frame	1
2	2.2	ST70471800	Spring Pin	1
3	2.3	IF93035000	Guide Sleeve	2

# Regulation Frame ASSY


### **FOAM Tube ASSY**

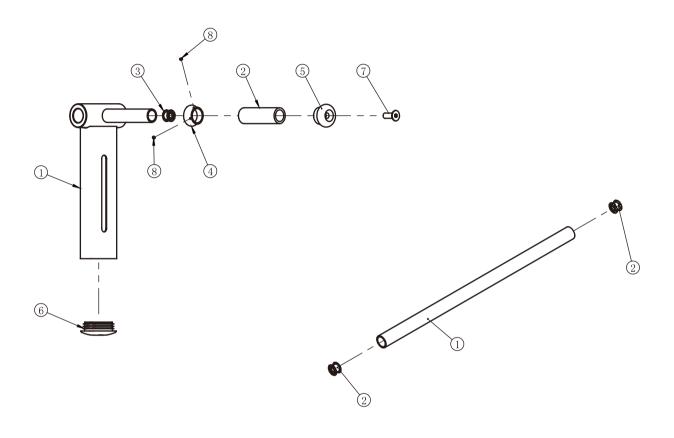

ItemNo.	Grade No.	Part No.	Description	QTY
1	3.1	HSP70530300	Regulation Frame	1
2	3.2	HSP70533100	Grip STФ30*Ф22*95	1
3	3.3	IF81165000	Nut M10	1
4	3.4	IT90102200	Ф25 Aluminium Grip Ring	1
5	3.5	IT90102100	Ф25 Aluminium Grip Cap	1
6	3.6	IN-D10134200	End Cap □30*70	1
7	3.7	CNLM10*35*35DS20	Flat Head Cap Screw M10*35	1
8	3.8	YZGB7710-32*3.2N19	Socket Set Screw 10-32UNF*3.2	2


ItemNo.	Grade No.	Part No.	Description	QTY
1	5.1	ABS70130700	FOAM Tube	1
2	5.2	IF81165000	Nut M10	2

### **Front Support Frame ASSY**

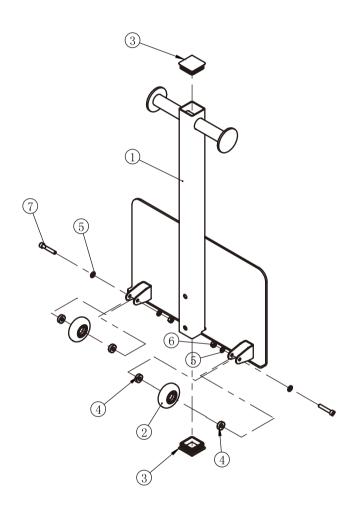

ItemNo.	Grade No.	Part No.	Description	QTY
1	4.1	HSP70530400	Front Support Frame	1
2	4.2	DP86703101B	Wheel	2
3	4.3	KPSFID3000	End Cap □50.8	2
4	4.4	AT4804000	Spacer	4
5	4.5	GB958DHS2	Flat Washer Φ9*Φ16*1.6	4
6	4.6	NM8DHS2	Nylon Lock Nut M8	2
7	4.7	GB70M8*45DHS20	Socket Head Cap Screw M8*45	2

# **Measurement Guide**

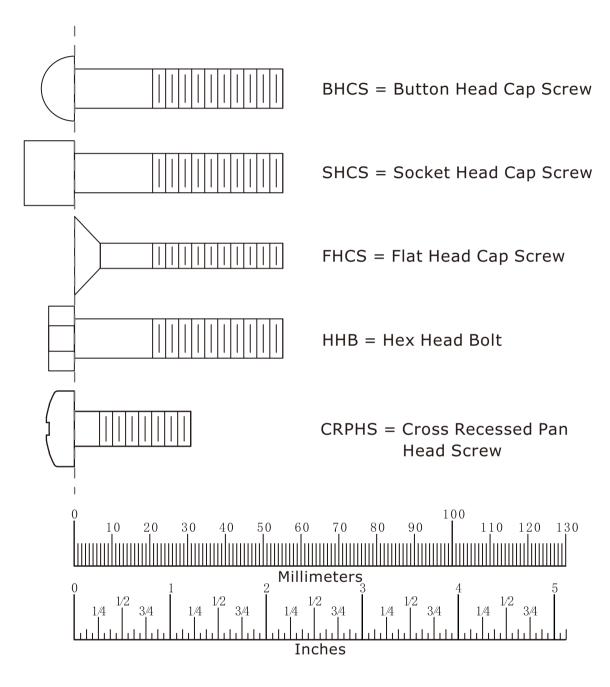

Diameter of bolt (mm/inch)	M6(1/4")	M8(5/16")	M10(3/8")	M12(1/2")	M16(5/8")
Tightening torque (N.m)	9~12	22~30	45~59	78~104	193~257
Operational methods for adult men	The strength of the wrist	The strength of the wrist and forearm	The strength of the entire arm	The strength of the arm and upper body	with all strength

### **Assembly Instructions**

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

# NOTE

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

# **Assembly**

### STEP 1


Attach one Regulation Support Frame ASSY (#2) to Base Frame ASSY (#1), using: eight  $\Phi$ 11\* $\Phi$ 20\*2 Flat Washer (#11) four M10 Nylon Lock Nut (#12) four M10\*70 SHCS (#15)

**Note: Wrench Tighten Bolts.** 

#### STEP 2

- 1. Attach one Regulation Frame ASSY (#3) to Regulation Support Frame ASSY (#2), using: one M10\*30 SHCS (#14)
- 2. Attach one FOAM Tube ASSY (#5) to Regulation Frame ASSY (#3), symmetrically installment, using:
  one M8\*10 SHCS (#18)

**Note: Wrench Tighten Bolts.** 

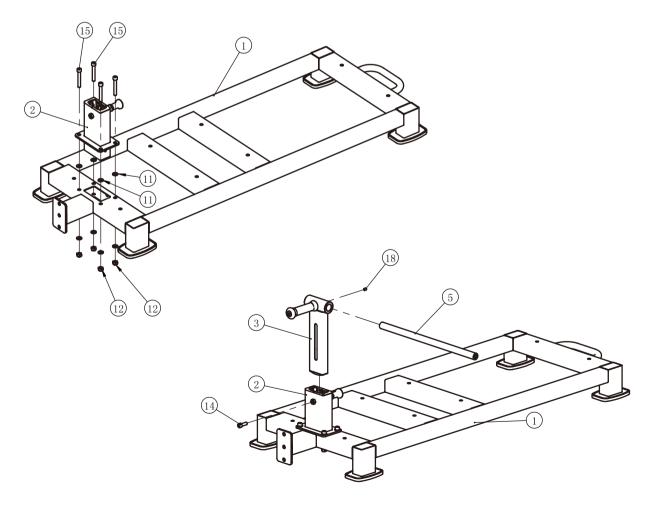

# **Assembly**

### STEP 3


Attach one Front Support Frame ASSY (#4) to Base Frame ASSY (#1), using: four  $\Phi11^*\Phi20^*2$  Flat Washer (#11) two M10 Nylon Lock Nut (#12) two M10\*80 SHCS (#16)

**Note: Wrench Tighten Bolts.** 

### STEP 4

Attach one Rectangle Pad (#7) and one Knee Pad (#8) to Base Frame ASSY (#1), using: eight  $\Phi$ 11\* $\Phi$ 20\*2 Flat Washer (#11) eight M10\*75 SHCS (#17)

**Note: Wrench Tighten Bolts.** 

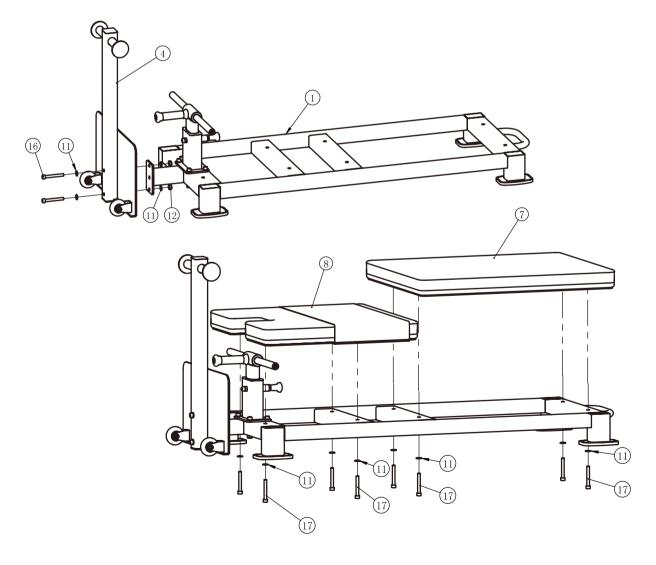


# **Assembly**

### STEP 5

Attach two FOAM(#6), two Plastic Ring (#9) and two Aluminium Cap (#10) to FOAM Tube ASSY (#5), using:

two M10\*35 Flat Head Cap Screw (#13)

**Note: Wrench Tighten Bolts.** 

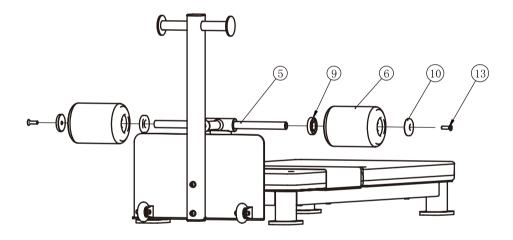


# **Adjust Instructions and Exercise Instructions**

### **Adjust Instructions**

Pull the Spring Pin and adjust the FOAM to the desired psition, then lock the Spring Pin.

#### **Exercise Instructions**

Kneeling on the Knee Pad after warm up, and put the FOAM to the desired psition, make the FOAM press your ankles. Put your hands together on your chest (or behind head), and look ahead. Keep your neck and body straight and lean forward slowly, without swinging.

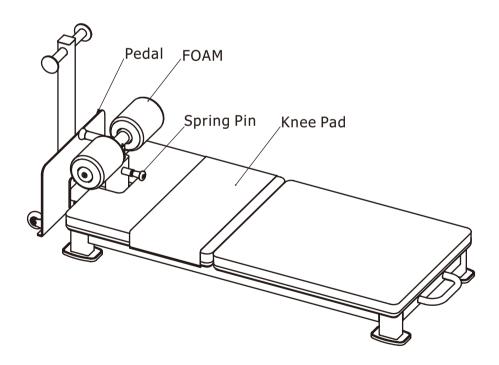

# **Maintenance Schedule**

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	L	ATES1	DATE	ENTR	Y	
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY						
Clean; Upholstery	DAILY	WEEKLY						
Inspect; Cables or Belts and their tension	DAILY	WEEKLY						
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS						
Inspect; All Decals	WEEKLY	3 MONTHS						
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS						
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS						
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS						
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS						
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY						
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY						
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS						

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

### **General Maintenance Information**

#### Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- \* Check all pieces for signs of visible wear or damage.
- \* Check springs in snap hooks and pull-pins for proper tension and alignment.
- \* If the spring sticks or has lost its rigidity, replace it immediately.

#### **Upholstery:**

- \* To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- \* Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- \* Replace ripped or warn upholstery immediately.
- \* Keep sharp or pointed objects clear of all upholstery.

#### Decals:

\* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

#### **Nuts and Bolts:**

- \* Inspect all nuts and bolts for any loosening and tighten if needed.
- \* Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

#### **Anti-Skid Surfaces:**

\* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

#### **Belts and Cables:**

- \* We uses only high quality belt, and mil-spec cables.
- \* Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- \* While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- \* Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

#### **Belt and Cable Tension:**

- \* Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- \* Check slack in cables and re-adjust cable tension if needed.

#### **Seat Sleeves, Guide Rods:**

- \* Wipe down adjusting tubes with a dust free rag before applying lubricant.
- \* Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

#### **Linear Bearings:**

\* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

#### PLEASE KEEP THIS FOR YOUR RECORDS

### **Weight Training Tips**

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.







